

Adjust the Eyecup

The eyecup on the Razor® HD 4000 twists up and down so any viewer can see the full field and enjoy comfortable viewing and ranging – with or without eyeglasses. When not using eyeglasses or sunglasses, it is recommended to keep the eyecup fully extended. For best viewing when wearing eyeglasses, twist eyecups down.




Focus

Adjust the diopter until the image is sharp. Make note of this diopter setting in case you need to set it again.

Low Battery Icon

The low battery icon displays once the battery reaches 25% life and stays on until there is no power.

 Battery Power Indicator

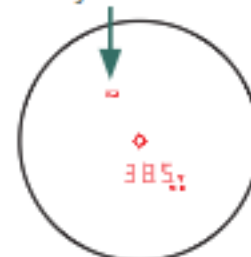


6

MODE SELECTION

The Razor® HD 4000 is factory set to the angle compensating HCD range mode, normal target mode, brightness level 4 and displayed in yards.

To change modes:

 After the Razor HD 4000 is powered up, activate the Mode/Display Selection by pressing and holding the Menu button for at least four seconds.

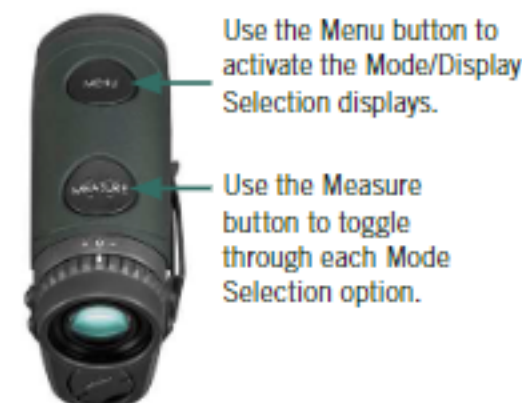

Use the Menu button to activate the Mode Selection displays. Use the Measure button to toggle through each Mode Selection option. You may exit Mode Selection at any time and save your settings by pressing and holding the Menu button for at least four seconds.

7

VORTEX®

 
RAZOR® HD 4000
LASER RANGEFINDER

SET AND SAVE MODE SELECTIONS

Ranging Mode Selection

Choose between the HCD and LOS Modes

After activating the Mode/Display Selection, press the Measure button to toggle between the HCD and LOS displays. Press the Menu button to save your desired choice and move to the Yards/Meters selection screen.

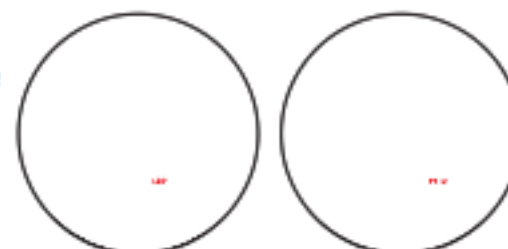

Choose Between HCD and LOS

Display Selection

Choose between Yards and Meters Display

 
After activating the Mode Selection, press the Measure button to toggle between the Yards and



Brightness Selection

Choose between Five Brightness Settings

The Razor® HD 4000 provides five illumination settings. Press the Measure button to toggle through the five Brightness settings. Press the Menu button to save your desired setting and move back to the HCD/LOS selection screen.

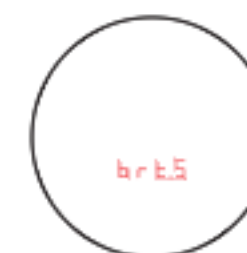

To exit Mode/Display Selection and save settings, press and hold the Menu button for four seconds. Settings will also save when the Razor HD 4000 powers down automatically.